



# MOVIE SCREEN™ INSTRUCTION SHEET

## IMPORTANT SAFETY INSTRUCTIONS



When Using Electrical Products, Basic Precautions Should Always Be Followed, Including The Following:

### READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

1. Do not use products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
2. This product is not intended for permanent installation or use.
3. Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
4. Do not secure product wiring with staples or nails or place on sharp hooks or nails.
5. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
6. This is an electrical product – not a toy! To avoid risk of fire, burns, personal injury, and electric shock, it should not be played with or placed where small children can reach it.
7. Do not use this product for other than its intended purpose.
8. Do not hang ornaments or other objects from cord, wire.
9. Do not close doors or windows on the product, or extension cords, as this may damage the wire insulation.
10. Do not cover the product with a cloth, paper, or any material not part of the product when in use.
11. This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If the plug still does not fit, contact a qualified electrician. Do not use an extension cord unless the plug can be fully inserted. Do not alter or replace the plug.
12. This product employs overload protection (fuse). A blown fuse indicates an overload or a short-circuit condition. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product markings for proper fuse rating) and check the product. If replacement fuse blows, a short-circuit may be present and the product should be discarded.
13. Before using and reusing, inspect the product carefully. Discard any products that have cut, damaged or frayed wire insulation cords, cracks, lamp holders or enclosures, loose connections, or exposed copper wire.
14. Read and follow all instructions that are on the product or provided with the product.

### SAVE THESE INSTRUCTIONS USE AND CARE INSTRUCTIONS

1. Before using and reusing, inspect the product carefully. Discard any products that have cut, damaged or frayed wire insulation cords, cracks, enclosures, loose connection, or exposed copper wire.
2. When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections and wires.
3. When not in use, store neatly in a cool, dry location protected from sunlight.

**WARNING:** Protect the electric fan and power cord from direct exposure to water. This precaution will reduce the risk of electrical shock. When the temperature is below 14°F (-10°C), the motor may temporarily stop running. The motor will begin functioning again in higher temperatures.

 
**WARNING:** Remove all plastic fasteners and tags. These are part of the packaging and should be discarded.

**CAUTION:** Do not attempt to inflate your Airblown® Inflatable Movie Screen™ during unusually strong winds. If it becomes too windy for safe operation, simply allow your Airblown® Inflatable Movie Screen™ to deflate and wait for better conditions before re-inflating.


**Congratulations! You're the proud owner of a Gemmy Airblown® Inflatable Movie Screen™. Please read over the directions carefully before using your Gemmy Airblown® Inflatable Movie Screen™.**

## CONTENTS:


Airblown® Inflatable Frame	1 pc
Movie Screen™	1 pc
Tether Stakes	8 pcs
Base Stakes	8 pcs
Nylon Tethers	8 pcs
Spare Fuse (5Amp, 125V)	1 pc
Storage Bag	1 pc

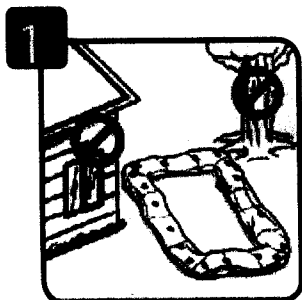

 
Remove contents from packaging and lay out deflated Airblown® Inflatable Movie Screen™ in a clear, flat area free of low overhangs, such as trees, eaves or anything else that could puncture or damage your Airblown® Inflatable.

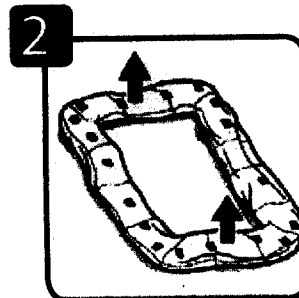

 
Ensure that your Airblown® Inflatable Frame is lying so that the plastic clips are facing up.

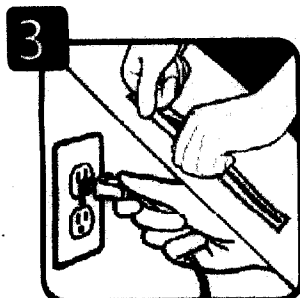

 
While item is still lying flat, plug power cord into receptacle or other outlet device to inflate your Airblown® Inflatable Movie Screen™. This process may take a few minutes. **Make sure the air intake is clear of fabric or other obstruction and zipper is fully closed.**

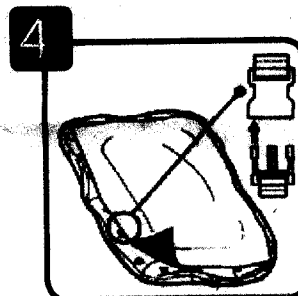

 
Attach Movie Screen™ to frame by connecting the clips along the edges and corners of the Movie Screen™. Locate the four metal legs on the bottom of the frame and unfold them completely.

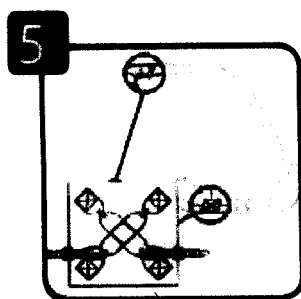

 
Attach 2 long nylon tethers to the upper "X"-shaped nylon strap on each side of the Airblown® Inflatable Movie Screen™.

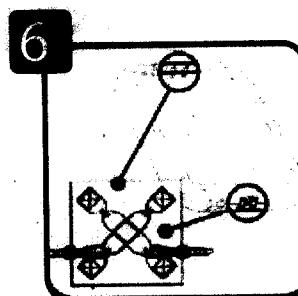

 Attach 2 short nylon tethers to the lower "X"-shaped nylon strap on each side of the Airblown® Inflatable Movie Screen™.

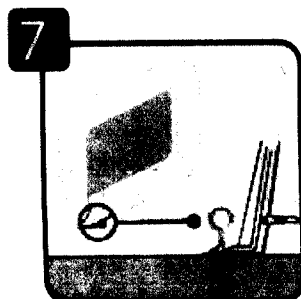

 Stand the Airblown® Inflatable Movie Screen™ upright, ensuring that fans are located on the bottom. Locate the 8 small Base Stakes and screw them into the ground through the provided holes in each leg of the stands.

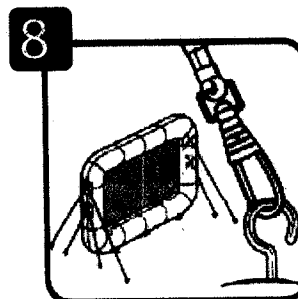

Insert the 8 tether stakes into the ground and attach clips from the nylon tethers to the stakes, as shown.

# GENERAL INSTRUCTIONS

## Trouble Shooting Checklist:

If your Airblown® Inflatable Movie Screen™ is not inflating, the problem may be:

1. The power source is disabled or the cord may be unplugged.
2. Debris may be obstructing air flow in the motor.
3. The zipper sealing the Airblown® Inflatable Movie Screen™ may not be securely closed.
4. Your item is ripped or torn. Please inspect your Airblown® Inflatable Movie Screen™ carefully for rips or tears.

## USER SERVICING INSTRUCTIONS

**WARNING:** Risk of Fire. Replace fuse only with 5Amp, 125V fuse (provided with product).

**WARNING:** Risk of Fire. Do not replace the attachment plug, as it contains a safety device (fuse) that should not be removed. Discard product if attachment plug is damaged.

Replace the fuse:

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on the cord.
2. Open fuse cover. Slide open the fuse access cover on top of the attachment plug towards blades.
3. Remove fuse carefully.
4. Close the fuse cover. Close the fuse access cover on top of the attachment plug.

## FREQUENTLY ASKED QUESTIONS (FAQ's)

**Note: ONCE FAN IS UNPLUGGED AND STOPS BLOWING, YOUR Airblown® Inflatable Movie Screen WILL DEFLATE.**

1. ***What are the ideal conditions to use my Airblown® Inflatable Movie Screen™?***  
The Airblown® Inflatable Movie Screen™ is designed for nighttime viewing. The brightness of your image will vary with the type of projector you use. We recommend you set up your Movie Screen™ in as dark of an area as possible (away from street lights and porch lights), and refer to your projector's instruction manual for ideal projector placement.
2. ***What happens if my Airblown® Inflatable Movie Screen™ becomes torn?***  
Rips in the Airblown® Inflatable Movie Screen™ can be sewn by hand (no special thread is required) or taped with clear packing tape. Note: if the screen itself becomes torn, it is recommended that it be sewn or taped on the backside to reduce visible damages and reflection from projectors.
3. ***How can I clean my Airblown® Inflatable Movie Screen™?***  
Wipe clean with a damp cloth and allow to dry before storing away. Use mild detergent if necessary.
4. ***When I unplug my Airblown® Inflatable Movie Screen™, it deflates. Why is this?***  
Your Airblown® Inflatable Movie Screen™ will not stay inflated unless it is plugged in and the fan is blowing air.
5. ***How much electricity does an Airblown® Inflatable Movie Screen™ consume?***  
It uses about as much energy as a few standard strings of Holiday Lights.
6. ***What is the best way to store my Movie Screen™?***  
Store in the included storage bag and keep in a cool, dry location.

7. ***My area is prone to unusually windy conditions, will this affect my Movie Screen™?***  
In order to prevent damage, we suggest you keep the Movie Screen™ protected from high winds.
8. ***My Movie Screen™ fully-inflates, but will not stand up properly. What can I do?***  
Please reference the General Instructions section of this manual for step-by-step instructions and illustrations on how to properly stake and secure your Movie Screen™ so that it will be correctly displayed.
9. ***There are wrinkles in my Movie Screen™. What should I do?***  
We recommend that either you allow your screen to hang up, or that you simply inflate your Airblown® Inflatable Movie Screen™ for a period of time before projecting images onto the screen. Any wrinkles should fall out naturally after a short while.
10. ***The screen is wrinkled - will this affect the quality of the picture?***  
Some wrinkling may occur as a result of folding your screen. However, the wrinkles will NOT affect the image on the screen as they are not noticeable in darker environments. Make sure the screen is firmly attached to all of the clips on the frame as this will allow for a more even surface for the projection.


These instructions relate to the following item numbers:

39112-31	39110-32	39111-32	39113-33	39117-32	39117-32S	39117-32T
39121-32	39121-32S	39121-32T	39127-32	39127-32S	39127-32T	

Questions? Visit us at **WWW.GEMMY.COM** or e-mail us at [general@gemmy.com](mailto:general@gemmy.com) or contact Gemmy at 1-800-231-6879 X444, Monday – Friday 8:30am – 5:30pm CST.

Gemmy makes more fun and festive products than you can imagine...Check out our web site at **WWW.GEMMY.COM** to see for yourself!

**WARNING:** This product contains chemicals, including lead, known to the State of California to cause cancer, and birth defects or other reproductive harm. ***Wash hands after handling.***



## STILL NEED HELP?


**BEFORE YOU RETURN THE ITEM TO THE STORE**

Visit [WWW.GEMMY.COM](http://WWW.GEMMY.COM) for instructions, ideas and new FAQ's.

Or call Gemmy's customer support center:

1-800-231-6879 X444 or

e-mail us at [general@gemmy.com](mailto:general@gemmy.com)



MADE IN CHINA

innovation. powered by



visit us at [gemmy.com](http://gemmy.com)™

PRINTED IN CHINA